

EVERET

ALL FOR AUTO



ITEM NO:EE-OK100

USER MANUAL

KEEP THE MANUAL NEAR THE MACHINE ALL TIME AND MAKE SURE ALL USERS HAVE READ THIS.

FOLLOW THE INSTRUCTIONS CAREFULLY TO GRANT THE MACHINE A CORRECT FUNCTION AND LONG SERVICE LIFE.

EAE Automotive Equipment Company Limited

 
The manufacturer keeps the rights to improve the contents in this manual.

Tel: +86-21-32500750
Fax: +86-21-32500785
[Http://www.eae-ae.com](http://www.eae-ae.com)
sales@eae-ae.com


Complete with:

Heavy duty trolley designed to accept a fixed hose reel.

hose reel with 10 meters 1/2" hose.

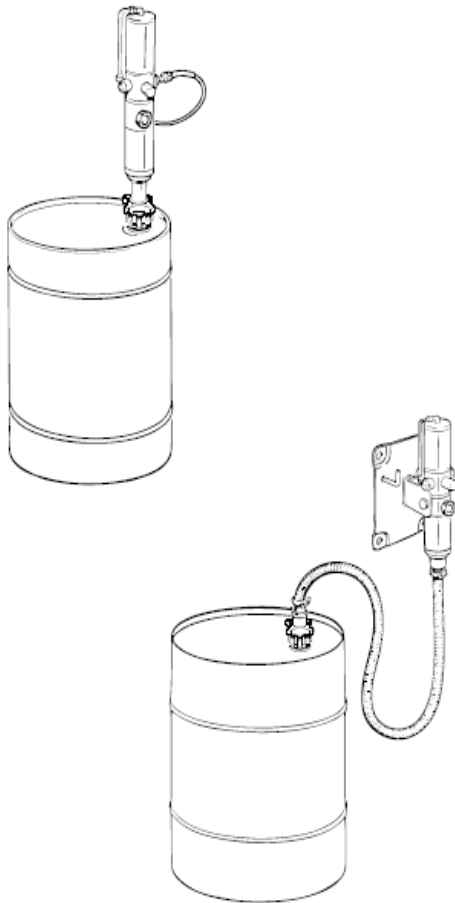

 On request (with overprice): hose reel wheel
with 15 meters 1/2" hose
double acting pump, bung adaptor,
adaptor double valve, oil gun with meter. Co
mplete with 1/2"straight swivel
pump-hose reel connecting hose 1/2" -2
meters.

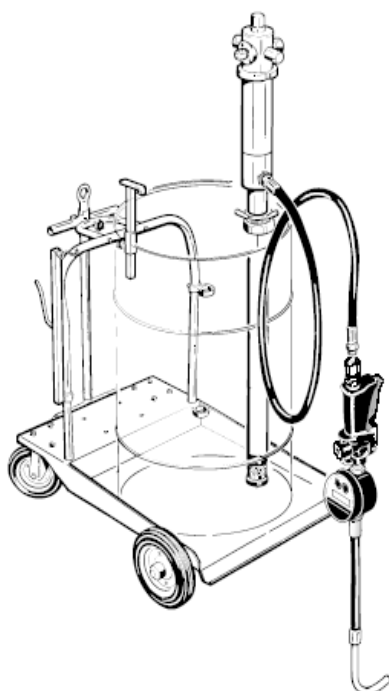

GB

PRESENTATION

Transfer pumps 23 and 40 liter/min
Pneumatic piston pumps suitable to
Transfer lubrication oil, used oil and
Antifreeze liquids

The pumps are available in the
Following versions:

-to be fitted directly into the drum

Mod.1:1/94E-mod.1:1/94T



-wall installation

Mod.1:1/60E-mod.1:1/60T

Pneumatic pumps for oil delivery

Pneumatic pumps suitable to deliver

  Oil of high or medium viscosity and

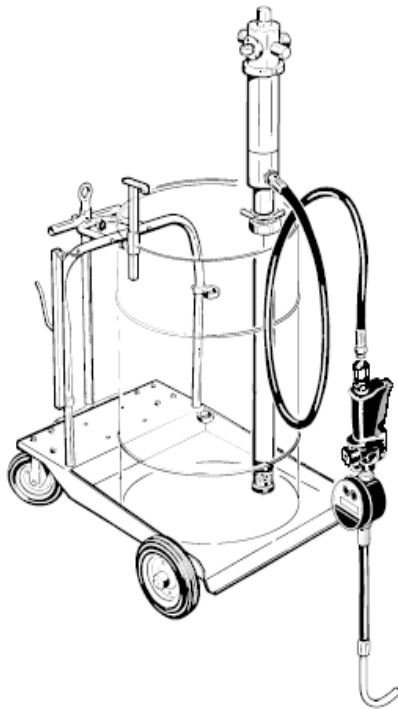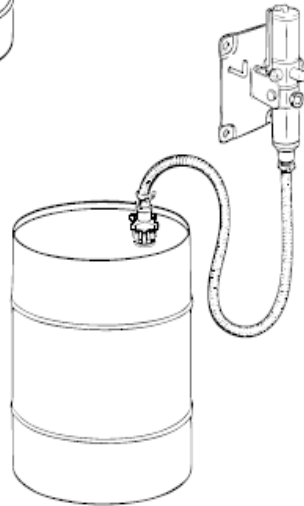

antifreeze liquids.

The pumps are available in the

Following versions:

-to be fitted directly into the drum

Mod.5:1/94-mod.5:1/73

Mod.3:1/94-mod.3:1/73

-wall installation

Mod.5:1/60-mod.3:1/60

IMPORTANT NOTE

THE USER SHOULD PERFORM ONLY ROUTINE MAINTENANCE OPERATIONS (SUCH AS FILTERS, SILENCERS, CLEANING)... WITH THE PUMP IN ORDER NOT TO DAMAGE IT OR COMPROMISE ITS SAFETY. CONTACT OUR SALES AND ASSISTANCE CENTRES SHOULD THE PUMP NEED ANY FURTHER MAINTENANCE

GB

PUMP ACCESSORIES

Once assembled the pump can be fitted with various accessories:

-oil delivery tube (normally 1/2" or 3/4"). Use only high quality tubes (according to DIN-SAE norms).

-oil delivery pistol

Connect delivery tube and delivery pistol to the pump using suitable pipe fittings.

GB

 
The oil capacity indicated on the table has been obtained with SAE 30 oil at room temperature (18)



1



2

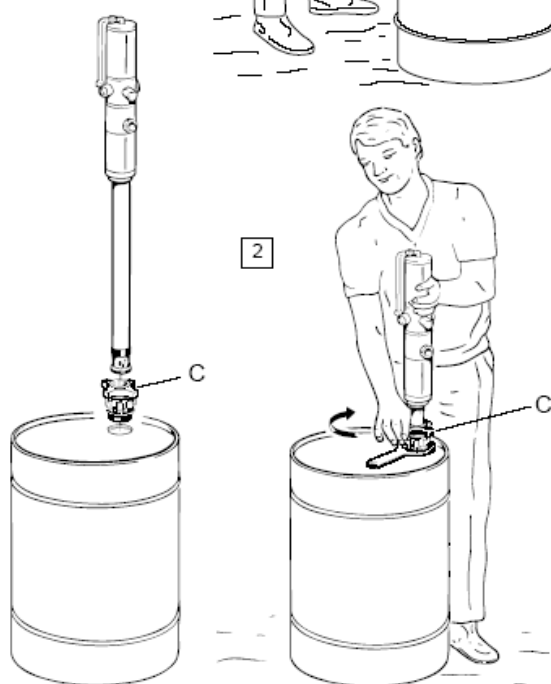

GB

TRANSPORT, HANDLING AND STORAGE

Pumps are delivered in appropriate cardboard containers. Packaging material should be adequately disposed

Handling and storage of the new pump do not require any special procedures.

However if the pump has been used, empty the used oil in the suction tube into an appropriate container before storage or handling the pump as shown (fig.1).

Do not smoke during the operation.

Do not use the pump near open flames.

Wear oil-proof gloves.

Dispose of used oil according to national environmental regulations.

START-UP

-Pumps fitted directly into the drum (fig.2)

Pumps are supplied ready for use.

Insert the pump into the drum and secure it with ring nut C, suitable for commercial drums with 57 diameter hole and threading 2G



 
 
PUMP ACCESSORIES

Once assembled the pump can be fitted with various accessories:

- oil delivery tube (normally 1/2" or 3/4"). Use only high quality tubes (according to DIN-SAE norms).

- oil delivery pistol

Connect delivery tube and delivery pistol to the pump using suitable pipe fittings.

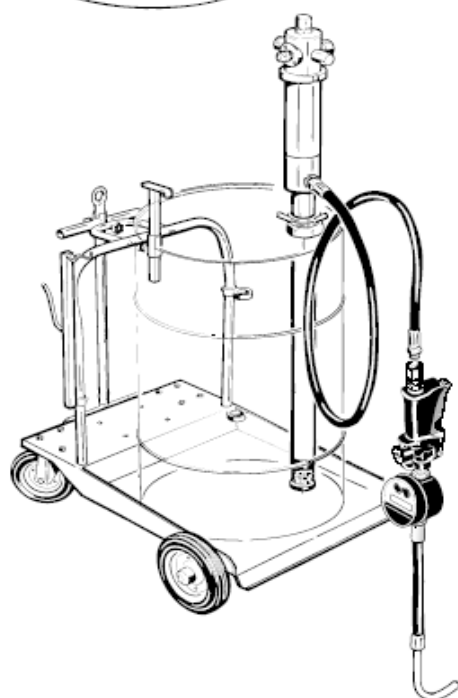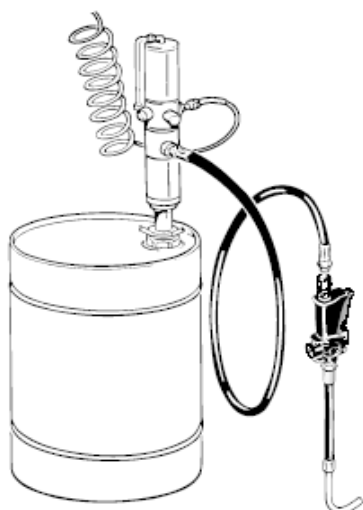

TECHNICAL INFORMATION	Mod.	5:1/94	5:1/73	5:1/60
Compression ratio	/	5:1	5:1	5:1
Air inlet connection	/	1/4"	1/4"	1/4"
Oil outlet connection	/	1/2"	1/2"	1/2"
Oil capacity at 6 bar (free output)	l/min.	18	18	18
Operating pressure	bar	6-8	6-8	6-8
Max. pressure allowed	bar	8	8	8
Suction tube diameter	mm.	42	42	on the wall
Air consumption	l/1'	270	270	270
Noise level	dB	81	81	81
Temperature of the delivered oil	C°	-10+50	-10+50	-10+50
Max. viscosity of the delivered oil	SAE	240	240	240
Appropriate drum size	kg.	180-220	50-60	on the wall
Weight	kg.	5,9	5,4	4,1
Length of the suction tube	mm.	940	730	270

The oil capacity indicated on the table has been obtained with SAE 30 oil at room temperature(18°).